

Wi-Fi NVR Quick operation guide

Packing list

Please confirm whether WI-FI NVR is intact after opening the package. And check below parts: power supply, mouse and quick operation guide.


Wi-fi NVR interface instruction:



- ①①VGA port: connect to display device
- ②②HDMI port: connect to display device
- ③③Net port: Connect to interchanger or Router LAN port
- ④④USB port: Connect to mouse or external HUB USB
- ⑤⑤Power port: Connect to 2A 12V power adapter

Hard disk installation

- 1 Unscrew the base screw and open the cover.
 - As shown in the picture, unscrew the eight screws of device base.

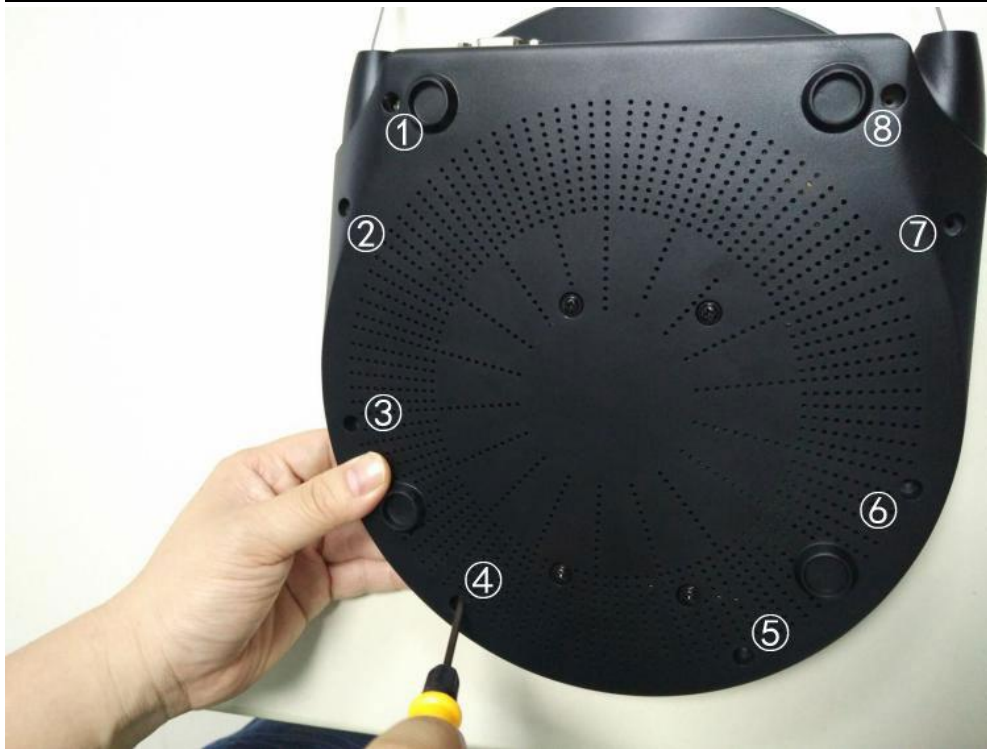

2 Insert hard disk interface

- Connect the power cable and SATA cable on the mainboard to hard disk(need to be self-located); put the hard disk on the hard disk slot; and then tighten the four screws matching to hard disk in the base.






3 Complete the installation

- Cover the device cover, tighten the eight screws of step 1, and put the antenna into the hole. As following picture shown:



Connection illustration

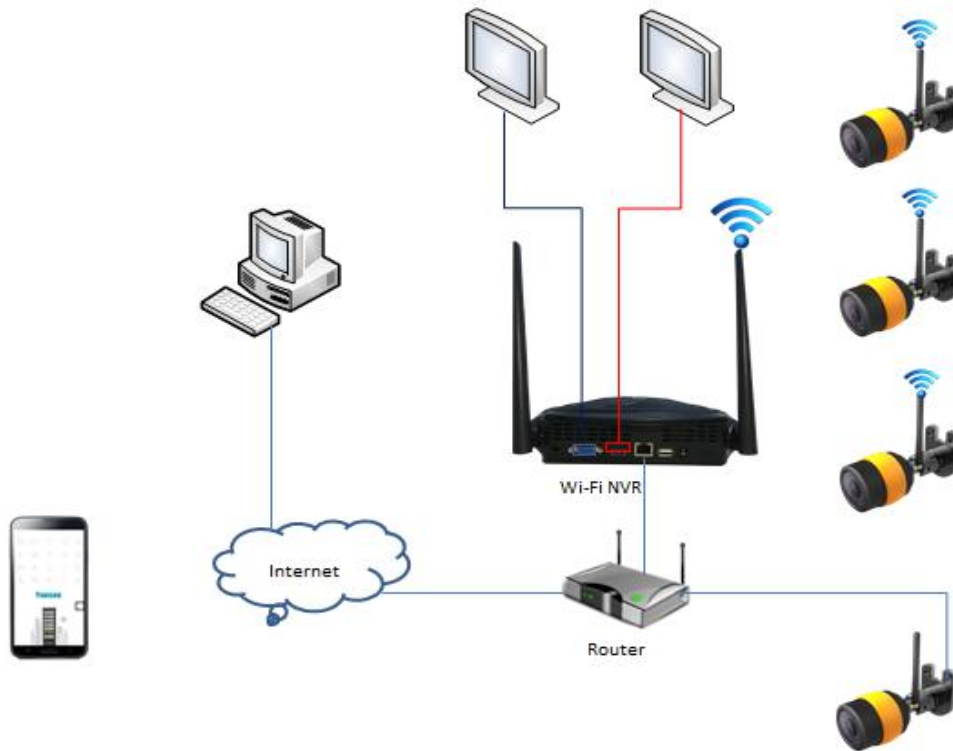

- Warm tips: Wireless devices may be subject to environmental interference in the using process; If the image Caton phenomenon appears in individual camera, please connect to the NVR with reticle.

Wi-Fi operation

1.Set-up guide

After NVR connecting to power, login the system (default user is admin, code is 888888). Complete the NVR time, internet and video setting according to starting guide, and download corresponding phone APP Yoosee by cellphone.

















2.Add camera

Right click by mouse in the blank of main interface, and then enter the video management interface.

After energizing the camera, connect the camera internet port to NVR internet access by reticle (such as meanwhile adding several cameras, camera and NVR need to be connected by interchanger). Click to refresh the list and find the camera need to be added, click "Match code" to add, pull out the camera reticle after adding successfully. The camera will transmit images to NVR through Wi-fi, and the IP is 172.20.14.x.

If choose "Auto add", camera will transmit images by reticle to NVR.

Notice: No need to add camera again,as Camera is matched to NVR before factory.

-  Split screen ▶
-  Video Manage
-  System setup
-  Video playback ▶
-  Video backup
-  Color adjust
-  PTZ control
-  Manual record
-  Volume ▶
-  Setup Wizard
-  System Mode
-  Fast network
-  Wifi add
-  Exit System

Video Manage

Protocol N1

ID	Device name	IP address	Port	Protocol
1	Gwell	192.168.1.90		G1

Refresh
Match Code
Auto Add
Modify
Advanced

< 0 / 0 >

Added device: 0 Remaining device: 4

Channel	Device name	IP address	Status
1			No video source
2			No video source
3			No video source
4			No video source

Delete
Delete All
Manual Edit
Channel Setup
Wifi Setup

Remaining network bandwidth: 70Mbps

Ok Cancel



3. Remote access by phone App

After downloading and installing Yoosee by starting guide, register and login into device list interface, click “+” on the upper right corner. Through “scan” function to scan QR code of Gview ID and enter into the adding interface, type default code:888888. Then can begin remote access after adding successfully (Strongly suggest to change default code to keep user’s privacy safe).

